


NAUCON-1000

NAUTRONIC scoreboard system nautronic.com Danmarksvej 1B DK-8660 Skanderborg Tel.: +45 86 51 11 66 scoreboards@nautronic.com

Getting to know your Naucon-1000

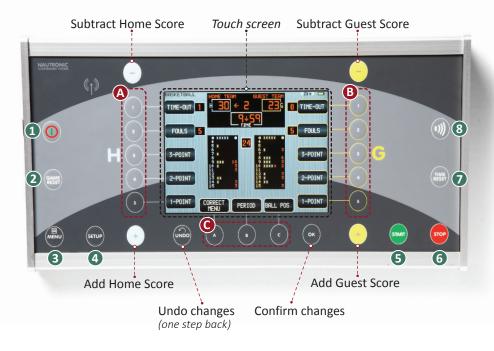

1 On/off

Turn Naucon-1000 on and off. When turning off the control panel, you must confirm by pressing **ACCEPT**.

2 Game reset

Resets display – you must confirm by pressing **ACCEPT**.

B Menu

A menu on the touch screen will show (*Fig. 1, page 2*).

4 Setup

A menu on the touch screen will show (Fig. 4a, page 5).

G Start

Game clock starts.

🔁 Stop

Game clock stops.

7 Time reset

Reset game clock*, you must confirm by pressing **ACCEPT**.

*You can only reset time when the game clock is stopped.

8 Manual horn

Press to blow the horn.

You can also use the click buttons refering to the buttons on the touch screen.

- Wireless communication
- Home
- G Guests

Start setting up your Naucon-1000

SPORT SELECT: Press the **MENU** click button on the console and you will see a screen of choices as shown below (*Fig. 1*). Press **EXIT SPORT** (marked with a B) to enter the screen SELECT SPORT (*Fig. 2*).



Fig. 1 – Extra menu, the bottom buttons

Fig. 1 – Bottom buttons:

A Return to sport

You return to the sport you have already chosen. Changes you have made will take place.

B Exit sport

Press **EXIT SPORT** to enter the SELECT SPORT menu (*Fig. 2*).

SFLECT SPORT TENNIS ASKETBALL HANDBALL FLOORBALL FUTSAL TENNIS FLOORBALL FUTSAL TENNIS FLOORBALL FUTSAL FUT

Fig. 2 – Select sport menu

Fig. 2 – Select sport:

G General setup

You can enter the General setup menu and make changes concerning Naucon-1000 and the standard scoreboard settings. Learn more about the General setup

menu on page 3.

D Page 1/3 more

Press **PAGE 1/3 MORE** to scroll the SELECT SPORT menu and choose between the various sports.

1 Select sport

The choices of sports are listed in a menu – to scroll the menu press **PAGE 1/3 MORE**.

2 Version ...

Shows the latest version of software installed on the Naucon-1000 unit.

General setup

How to navigate in the GENERAL SETUP MENU.

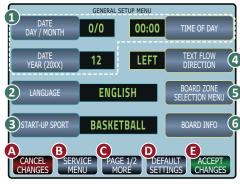


Fig. 3a – General setup menu, page 1/2

Fig. 3b – General setup menu, page 2/2

boards in the activated zones.

the touch screen.

 \rightarrow If a scoreboard is turned on and

connected to Naucon-1000, the

address^{*2} from the scoreboard, side-

boards or shot clocks is displayed on

MENU

GENERAL SETUP MENU

24:00

ON

50%

SETTINGS

7:00

0FF

5

BOARD WATCH

OFF TIME

TOUCH KEY CLICK

DIM BACKLIGHT DURING GAME

ACCEPT

CHANGES

(11)

(7)

8)

BOARD WATCH

ON TIME

KEY CLICK

9 BACKLIGHT LEVEL

CHANGES

6 Board info

Fig. 3a – General setup "PAGE 1/2":

1 Date, year and time of day

You can change the day, month, year and time of day. Once set, the Naucon-1000 unit will receive time, date and year information from the main scoreboard. Naucon-1000 does not have a built-in timer.

2 Language

Scroll through the various languages.

Start-up sport

Set the default START-UP SPORT.

4 Text flow direction

Toggle and choose between the directions of the rolling text line, from LEFT or RIGHT.

S Board zone selection menu

You can turn the zones ON or OFF.*1

*¹If another Naucon-1000 is transmitting in the same zone, they might interfere.

B Key click

Turn ON or OFF a sound for the buttons on the touch screen or/and the physical click buttons on the console.

Backlight level

Adjust the light intensity of the touch screen. **1** is lowest and **5** is highest intensity. Lower level extends battery life.

Dimming timeout after keypress

Time before dimming the backlight on the touch screen (0-99 min.).

Dim backlight during game

Adjust the light intensity of the touch screen during the game (0-99% of the backlight level).

Fig. 3a and 3b – Bottom buttons:

Cancel changes

Press **CANCEL CHANGES** if you want to cancel your changes. You will then return to the previous screen.

B Service menu

Enter SERVICE MENU. → Please ask your dealer for a password to enter this menu.

C Page 1/2 more

Press **PAGE 1/2 MORE** to scroll the pages in the menu.

Default settings

Press **DEFAULT SETTINGS** if you want to return to Naucon-1000's default settings.

Accept changes

Press **ACCEPT CHANGES** if you want to save your changes. You return to the SELECT SPORT menu.

*²An address is a refering number (10-69) in the BOARD ZONES SETUP menu. Learn more in the full Naucon-1000 User manual.

Naucon-1000 starts searching for score-

Fig. 3b – General setup "PAGE 2/2":

O Board watch – on and off time

Default the clock on the board will start up at 7 AM and turn off again at midnight. You can change both settings.

Set the clock to be on **or** off at all time:

00:00-24:00: The clock is always on.

00:00-00:00: The clock is always off.

Selected sport – setup

Choose a sport from the SELECT SPORT MENU (*Fig. 2, page 2*) and press the **SETUP** click button on the console. You will see a menu like shown below (*Fig. 4a*). Default settings will show with green text on the touch screen. THE EXAMPLE BELOW IS BASED ON BASKETBALL.

SO PLEASE NOTE THAT THE MENU CAN VARY FROM SPORT TO SPORT!





Fig. 4a – Setup basketball menu "Page 1/2"

Fig. 4a – "PAGE 1/2":

1 Edit lineups

You can edit HOME and GUEST team. You will enter a screen where you can change the name and number of the players (*Fig. 5, page 7*).

2 Period time

Set the length of a period.

3 Break time

Set the length of the breaks between periods.

• Extended break time

Set the length of the breaks between periods in an extended match.

Extended period time Set the length of an extended period.

G Half-time break time Set the length of the half time break.

Fig. 4b – Setup basketball menu "Page 2/2"

Count mode

You toggle between whether the game clock is counting up or down by pressing **COUNT MODE**.

Fig. 4b – "PAGE 2/2":

8 Pre time

Set the length of the time counting down before the match.

Shot clock short time

Set the counting length of the shot clock's "Time 2".

Show sideboards

Turn the sideboards ON or OFF.

Shot clock time

Set the time / seconds of count down for the shot clocks.

Automatic horn

You can toggle between turning the automatic horn ON or OFF.

B Player number selection

Choose whether scores and penalties are given to a specific player or to the whole team.

LIST: Choose player number from a list.

TYPE: Type player number.

OFF: Scores and penalties are given to the whole team.

Fig. 4a and 4b – Bottom buttons:

Cancel changes

Press **CANCEL CHANGES** if you want to cancel the changes you just made. You will return to the screen from where you can operate the game.

B Page 1/2 more

If there is more than one page you can press **PAGE 1/2 MORE** to scroll the setup menu.

O Default settings

Press **DEFAULT SETTINGS** if you want to return to the Naucon-1000 default settings for the chosen sport.

• Accept changes

Press **ACCEPT CHANGES** if you want to save your changes. You will then return to the screen from where can you operate the game.

Edit team lineups

When you have selected a sport (*Fig. 2, page 2*) you can press the **SETUP** click button on the console. Change the lineups by pressing **EDIT HOME** or **GUEST TEAM LINEUP**, you will enter a screen like shown below (*Fig. 5*).

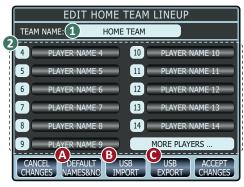




Fig. 5 – The editable boxes:

1 Edit Home/Guest Team lineup

Click on the "TEAM NAME"-box on the touch screen. You will enter a screen with a keyboard (*Fig. 6*) which allows you to change the text line.

2 Player name & number

Click on a **PLAYER NAME** on the touch screen. You will enter a screen with a keyboard (*Fig. 6*) which allows you to change the name.

When pressing a player number you will get a numeric keyboard for changing the numbers (00-99 or blank).

The **MORE PLAYERS** ...-button toggles pages if more players than shown are availble for a specific sport.



Fig. 6 – The text will show in red while editing

Fig. 6 – The interactive graphics:

B Editable text field

When entering the keyboard you can start to type or you can clear text . Remember to save your changes by pressing **ACCEPT**.

4 Keyboard

Use the keyboard* to type names of the players.

*Default keyboard is set to Western. Press the button marked with a D to change keyboard.

Fig. 5 & 6 – Bottom buttons

Operault names & no

When you press **DEFAULT NAMES & NO**, you reset the lineup and team name to the default text. You will have to confirm resetting before it takes place.

B USB import

You can import a list with player and team names from an USB stick. Insert the USB stick with a CSV file (*Comma Separated Values file*) and press **USB IMPORT**. Your lineups will be imported from the file.

Learn more in the full Naucon-1000 User manual or contact your dealer for more information.

O USB export

Exporting player and team names to an USB stick. Insert the USB stick and press **USB EXPORT**. Your lineups will be exported from Naucon-1000 to a CSV file called: **"TeamData.csv**" unto the USB stick.

● Keyboard >Western<

Naucon-1000 has four different keyboards avaliable. Default is set to WESTERN. Press the button to change keyboard. Choose between **WESTERN**, **RUSSIAN**, **HEBREW** and **ARABIC**.

Clear text

Clear the text in the editable text field.

Updating the Naucon-1000 software

WARNING: WHEN A SOFTWARE UPDATE IS PERFORMED, ALL SAVED CONFIGURATIONS WILL BE LOST AND SET TO DEFAULT!

To update to the latest version of software to Naucon-1000, follow the steps below:

8 – The touch screen will display the following text: "DISK FOUND."

- **1** Turn Naucon-1000 off.
- 2 Mount the power-supply.
- **3** Press and hold the **SETUP** button.

While still holding the **SETUP** botton:

- 4 Turn Naucon-1000 on.
- **5** Release the **SETUP** button.
- 6 The touch screen will display the following text: "BOOTLOADER STARTED, INSERT USB DRIVE."
- 7 Insert an USB stick with software supported by Nautronic a/s.

- After 10-15 seconds:
- 9 The touch screen will display the following text: "PLEASE REMOVE DRIVE."
- **10** Remove the USB stick.
- 11 The Naucon-1000 unit turns off.
- → Software update is done.

When Naucon-1000 is turned on for the first time after a Software update, it will take approximately 1 minute longer than a normal start up.



Trouble shooting

HARDWARE PROBLEMS: Locate the problem with a little help from the diodes and the illustration below, *Fig. 8*.

Wireless module J2 J3 J4 C F1 F3 F3

Fig. 8 – The bottom of a scoreboard

THE LEDS INDICATE THE FOLLOWING, WHEN A SCOREBOARD IS WORKING PROPERLY:

- → D1, D2, D3, D4 and D5 constantly light green.
- \rightarrow D6 flashes red rapidly.
- \rightarrow D7 flashes yellow once per second.
- → D8 flashes red rapidly but only if a radio module is present.

D1 – MAIN

If D1 light is off: Check fuse F3. Press and turn F3 at the same time to check if the fuse is blown and must be replaced.

D2 – 230VAC LED *If D2 light is off:* Check main power connection.

D3 – 12 VDC HORN *If D3 light is off:* Check fuse F1. *Press and turn F1 at the same time to check if the fuse is blown and must be replaced.*

D4 – 24VDC DIGIT If D4 light is off: Check fuse F2. Press and turn F2 at the same time to check if the fuse is blown and must be replaced.

D5 – 24VDC FOR NAUCON-1000 *If D5 light is off:* Remove all plugs connected to J2, J3 and J4. If D5 light turns on, there might be a chopped circuit in the cables or in Naucon-1000. **D6** – DATA COMMUNICATION *If D6 light is off:*

There is no data reception.

- → Check the cable connected to the control panel.
- \rightarrow Check the wall connector.

D7 – INTERNAL OPERATION *If D7 light is either off or constantly on:* Internal units in the scoreboard might be damaged.

D8 – WIRELESS COMMUNICATION *If D8 light is off:*

There is no radio signal reception.

- → Wireless module must be installed for D8 to function.
- \rightarrow Check that the Naucon-1000 is turned on.

FUSES:

 $F1 \rightarrow 5AF$

- $F2 \rightarrow 5AF$
- ${
 m F3}
 ightarrow$ 1AT

NAUTRONIC SCOREBOARD SYSTEM

Danmarksvej 1B DK-8660 Skanderborg Tel: +45 86 51 11 66 scoreboards@nautronic.com nautronic.com

The entire guide is subject to alterations